

Loosen these 2 screws to move the height adjustment bar – slide it up and down to set for the correct height of the required coin type.

Turn this screw in or out to adjust the chassis for the correct width of the required coin type. Note that the screw has a lock nut on it that will need adjustment to allow movement – make sure it is tightened again once the width is set.

